

1 ASSEMBLY INSTRUCTION



Equipment commissioning: Make sure the CV-Log-35 is not powered when connecting/disconnecting sensors. A connection or disconnection of a CV-Log-35 analog input while powered on could damage the product.

1. Sensor connection


If the CV-Log-35 sensors are not factory wired, start by connecting the desired sensors to the inputs of the product. Refer to the CVLog3500 wiring diagram for connection details.

2. Battery connection

Before the CV-Log-35 is commissioned, plug in the battery:

- Internal battery (standard): open the product by turning the CV-Log-35 head (blue part of the product) anticlockwise by 1/8 of a turn and connect the battery. Then properly close the product making sure to turn the blue lid clockwise until stop.
- High-capacity external battery (option): connect the circular connector of the external battery to the corresponding connector located on the black part of the CV-Log-35 enclosure.


3. Enable CV-Log-35

To activate the product, keep the front button  pressed for approximately 5 seconds until a green LED lights up continuously on the front panel of the D35. Release the button after the flash.

2 OPERATING MODE

The CV-Log-35 has 3 modes of operation:

- "Standby" mode
- "Acquisition" mode
- "Configuration" mode

Press the front panel button  to navigate between modes, as indicated in Figure 1.

In "Standby" mode you can remove the SIM card or SD card, as well as connect or disconnect physical inputs.

The "Acquisition" mode is the operating mode of the CV-Log-35. In this mode, the device acquires the signals from the connected sensors and saves them to the internal memory. If the data communication option is enabled, the recorded data is sent across the cellular network at the set interval time.

The "Configuration" mode is used to activate the WiFi local network generated by the device, to configure the CV-Log-35.

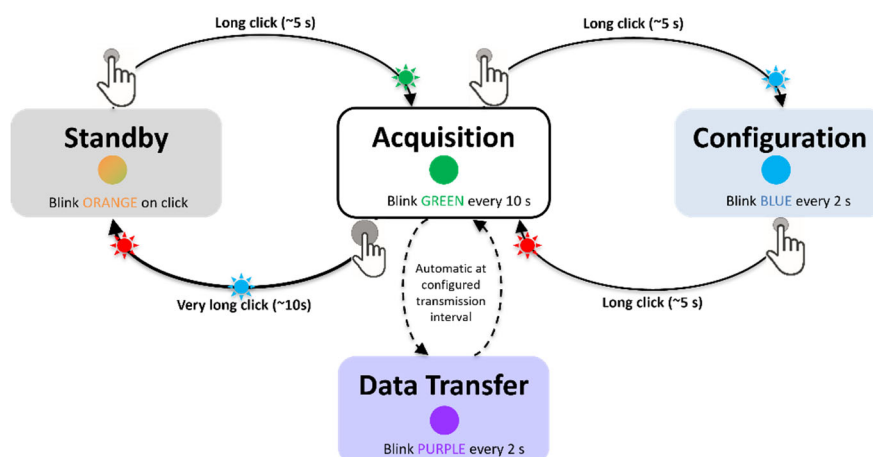



Figure 1: Logic diagram showing the devices various modes of operation and how to switch from one to another

3 PRODUCT CONFIGURATION

1. Activate "**Configuration**" mode on your CV-Log-35 as indicated in the previous section (from "**Acquisition**" mode, press the button for 5 seconds).
2. Connect your smartphone, tablet, or computer to the WiFi network generated by the CV-Log-35.
The network has the **default name**: *Cv-Log-35- < serial number >*
The default **password** is: *CVLOG35_ < last 4 digits of the series serial number >*



We strongly recommend changing the default password at first installation.

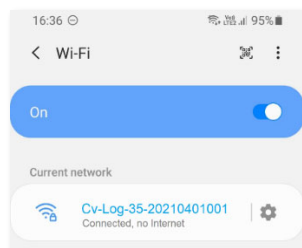

Note: The network generated by the CV-Log-35 has no Internet access. Any error messages about this can be ignored.

3. Enter the address <http://192.168.4.1> in your usual internet browser, or scan the following QR code using a QR code reading application:




4. After a few seconds, the configuration interface of your CV-Log-35 will be displayed on the default browser.
5. The home page displays the measured values in real time. It also contains the web browsing menu as well as other useful information of your CV-Log-35.



4 BASIC SYSTEM SETTINGS

1. Click on the "System" menu.
2. Give your CV-Log-35 a name.
3. Select the language of the interface.
4. Select your time zone using the "DETECT" button. If the time zone is not detected automatically, you can choose it manually with the "Time Zone" drop-down menu.

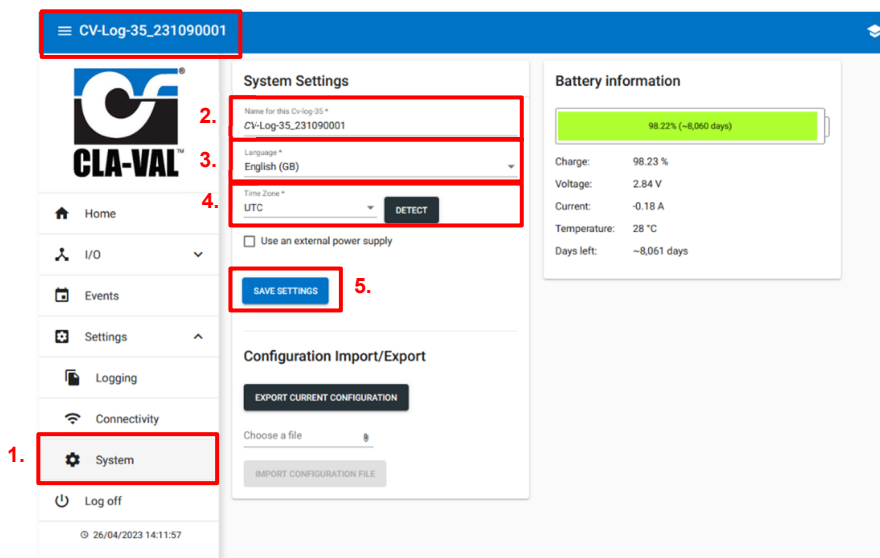


5. Click on "SAVE SETTINGS" for the changes to be applied.
6. Click on "SYNCHRONIZE NOW" to update your unit's clock immediately.




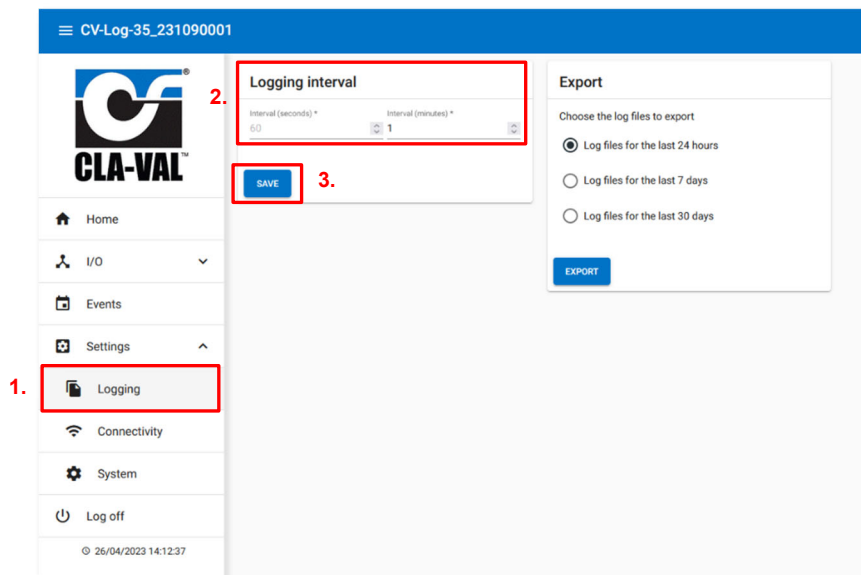
This operation can only be performed if the CV-Log-35 is connected to the cellular network (option). If not, go directly to step 7.

7. Check that the time displayed on the clock under the navigation menu is correct. If not, you can manually set the time in "Manually set date and time". Click on "SET DATE AND TIME" to have the change applied.

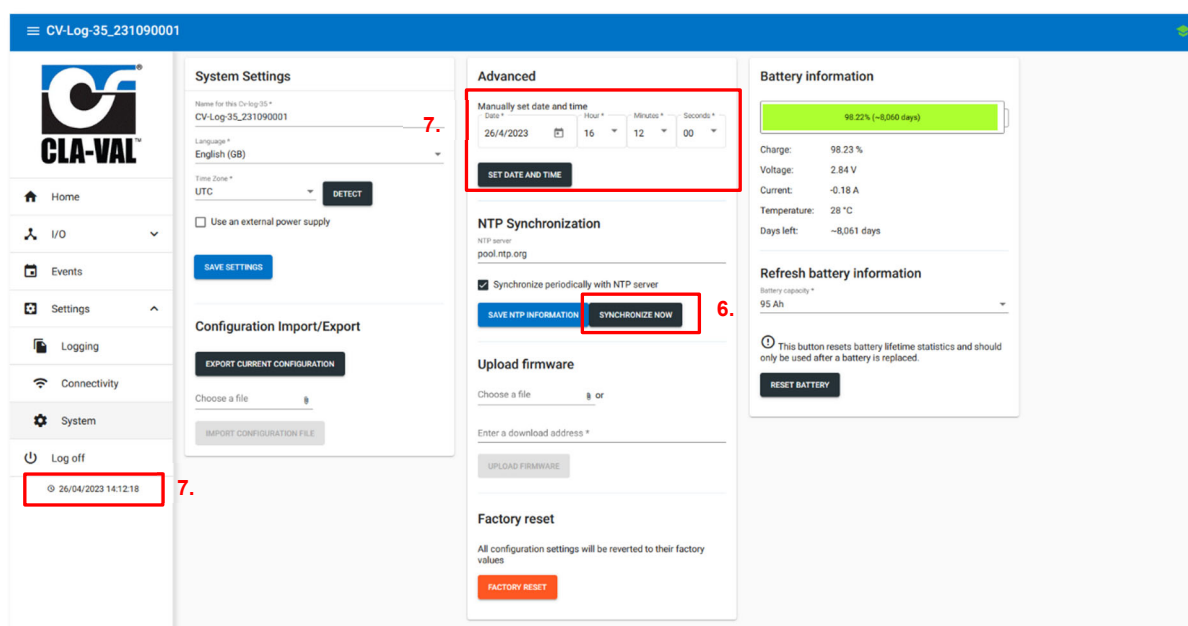


5 LOGGING SETTING


1. Click on "  **Logging**" menu to access the corresponding configuration page.
2. Choose a recording interval. This interval manages the periodic recording of all activated inputs.
3. Click **"SAVE"** to apply the changes.



6 REGISTER ON LINK2VALVES (COMMUNICATION OPTION)


Link2Valves™ is the CLA-VAL web platform (<https://cla-val.ch>) that allows the remote access to your CV-Log-35. A Link2Valves account is necessary. Please contact CLA-VAL to get one for free if you don't have it yet.

1. Click on "  **Connectivity**" menu.
2. Under **"Data Transfer"**, choose the **"Link2Valves"** option.

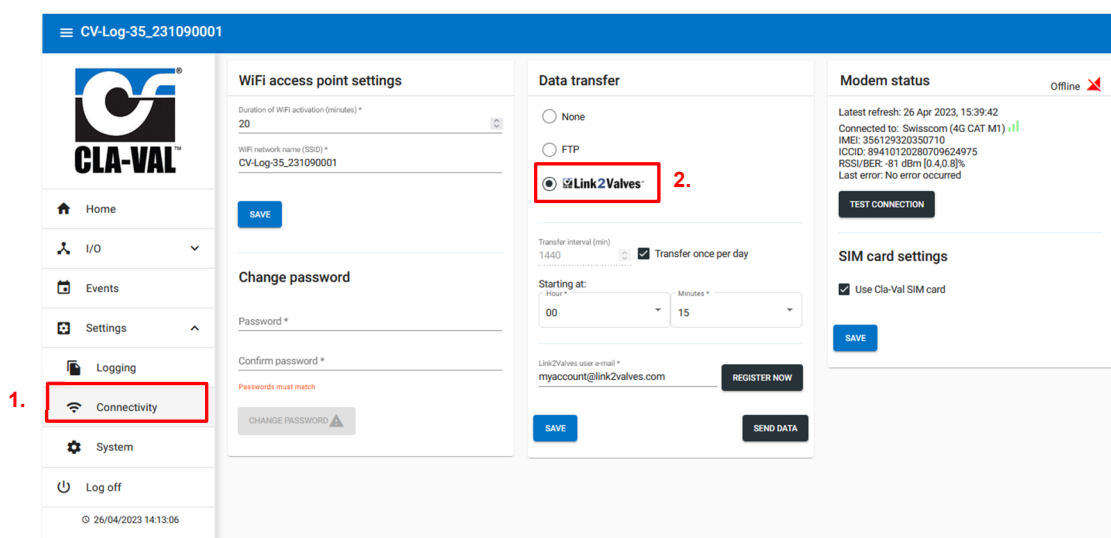

3. Choose the transfer interval and the time when the transfer will start. This interval will determine the frequency of communications of the CV-Log-35 and Link2Valves. Please note that a faster interval will have a negative impact on the battery life and generate potential additional data communication costs.
4. Associate the CV-Log-35 unit with your Link2Valves user account. First, enter the email address of your Link2Valves account. If you do not have one, please contact CLA-VAL to get one for free. Then click on **"REGISTER NOW"** and wait for the message **"Success! "**.
5. Don't forget to click **"SAVE"** for your changes to take effect.

Data transfer

☐ None
☐ FTP
☒  Link2Valves™

Transfer interval (min) *
 60

☐ Transfer once per day

Starting at:
 Hour * 00 Minutes * 30

Link2Valves user e-mail *
 myaccount@link2valves.com